



Got questions? Contact Us:
info@touchnhold.com
1-866-TH-Closer (1-866-842-5673)

INSTALL IT LIKE A PRO

Save yourself the headache. Get an easy to follow install guide by scanning here:



Or go to: bit.ly/InstallTnH

Single kits include:

- (4) #10 x 1 1/2" screws
- (2) #10 x 5/8" screws
- Short pin
- Long pin
- Short Yellow Clip
- Jamb Bracket
- Door Bracket
- Touch 'n Hold® Smooth closer

Dual kits include:

- All single kit hardware plus:
- (4) #10 x 1 1/2" screws
- (2) #10 x 5/8" screws
- 2nd Short pin
- 2nd Long pin
- Long Yellow Clip
- 2nd Jamb Bracket
- 2nd Door bracket
- Closer (no button)

SPECIAL NOTE! The hold open feature will engage the first time the rod is pulled out during installation. **DO NOT** push the button to release the hold open feature. Simply pull the rod farther out (without touching the button) and release. The rod should slowly retract.

INSTALLATION

Tools required:

- Power drill with an 1/8" drill bit
- No.2 Phillips screwdriver
- Pencil


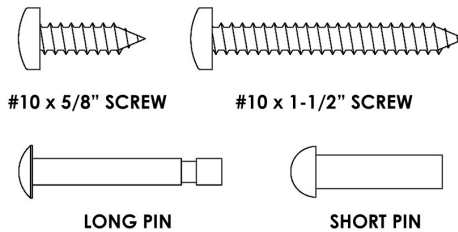


Fig. 1 Full Scale

1) Install the jamb bracket

- Align the jamb bracket so that the edge is 1/4" back from the door (Fig. 2).
- Using a pencil, mark your door jamb at each of the four screw holes in the bracket.
- Drill 1/8" pilot holes on the marks.
- Fasten the bracket to the jamb with the four longer screws (#10 x 1 1/2").

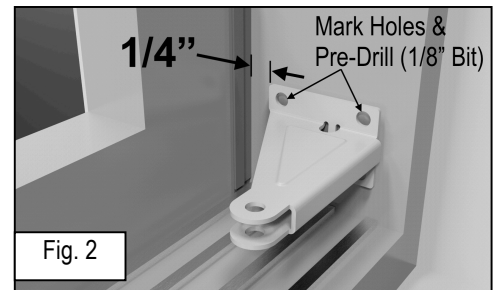


Note: Single Kit Closer can be located anywhere on the door.

For DUAL KITS, follow these additional instructions:


Bottom Closer: Locate jamb bracket about 1" above the door expander if possible. Bottom closer may need to be positioned over the door expander in some cases.

Top Closer: Locate jamb bracket about 1" down from the top of the door. (Fig. 3)

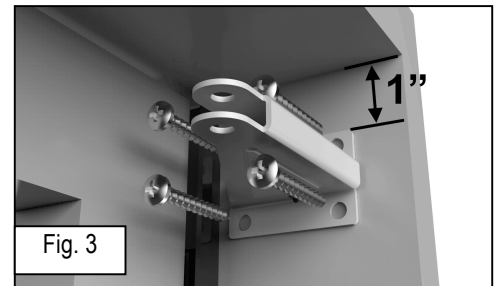

2) Attach the door bracket to the closer

Using the long pin, secure the door bracket to the outer hole of the closer as shown. (Fig. 4)

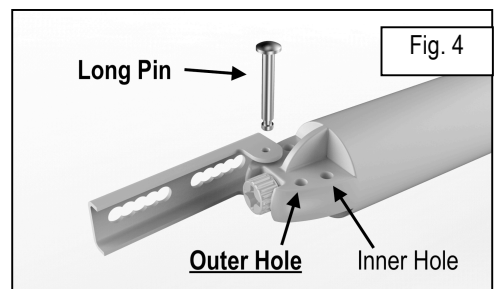


3) Attach the closer to the jamb bracket

Using the short pin, attach the closer rod to the jamb bracket.

- With one hand, pull the cylinder out to expose more of the rod and then clip the small yellow spacer onto the rod. (Fig. 5)
- Allow the cylinder to retract.

Note: If the closer does not retract, simply pull the cylinder again and release. It should retract. **Do not push the button.**

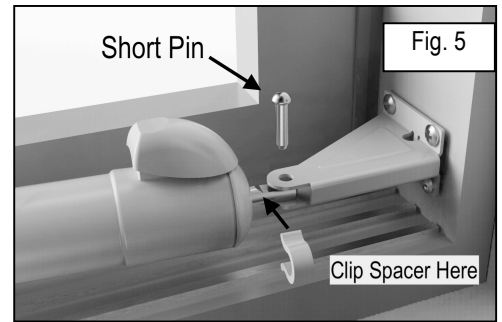




For Dual Kits: The long yellow spacer goes with the non-button closer, and the short spacer goes with the button closer.

4) Attach the door bracket to the door

With the door closed, hold the assembly level and align the door bracket on the door.

- Make a mark on the door at the middle of the two groove holes in the door bracket. (Fig. 6)
- Move closer out of the way and drill a 1/8" pilot hole through the two marks. **Caution: Do not drill through the outside of the door!**
- Remove the door bracket from the closer and fasten it to the door using the two shorter screws (#10 x 5/8"). (Fig. 7)
- Reattach the closer to the door bracket using the long pin. Place the small O-ring on the bottom side of the door bracket pin. (Fig. 8)
- Open the door and remove the yellow spacer. **YOU DID IT!!!**

For Dual Kits: Repeat all steps for second closer.

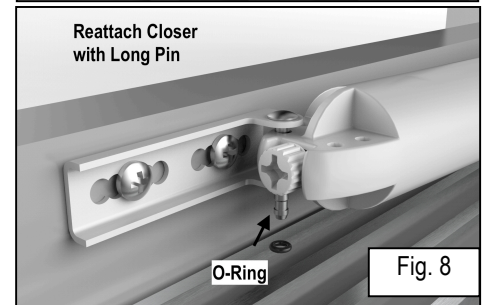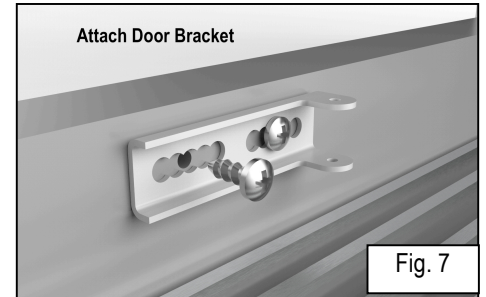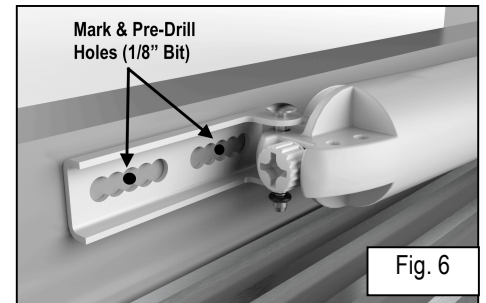


HOW TO USE

- 1) **Tap Button** to hold door open in any position.
- 2) **Push Door Farther Open** to release hold open feature and allow the door to close (**Do Not Push Button** again when you want to close the door).

ADJUSTING YOUR CLOSER

Latching Force Adjustment


(Loosen screws and shift bracket)

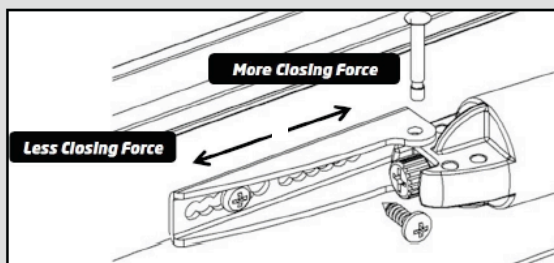

Closing Speed Adjustment

Faster

Slower

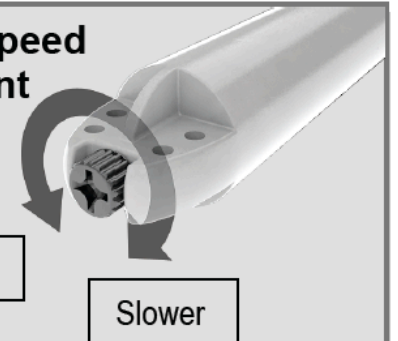

Greenstar

www.touchnhold.com

Made in Taiwan – Two year Warranty

INS-GS-TNH-SMOOTH